


MINI AIR COMPRESSOR AC-55

PART LIST

UL file No.E227093
CE file No.02K282CC

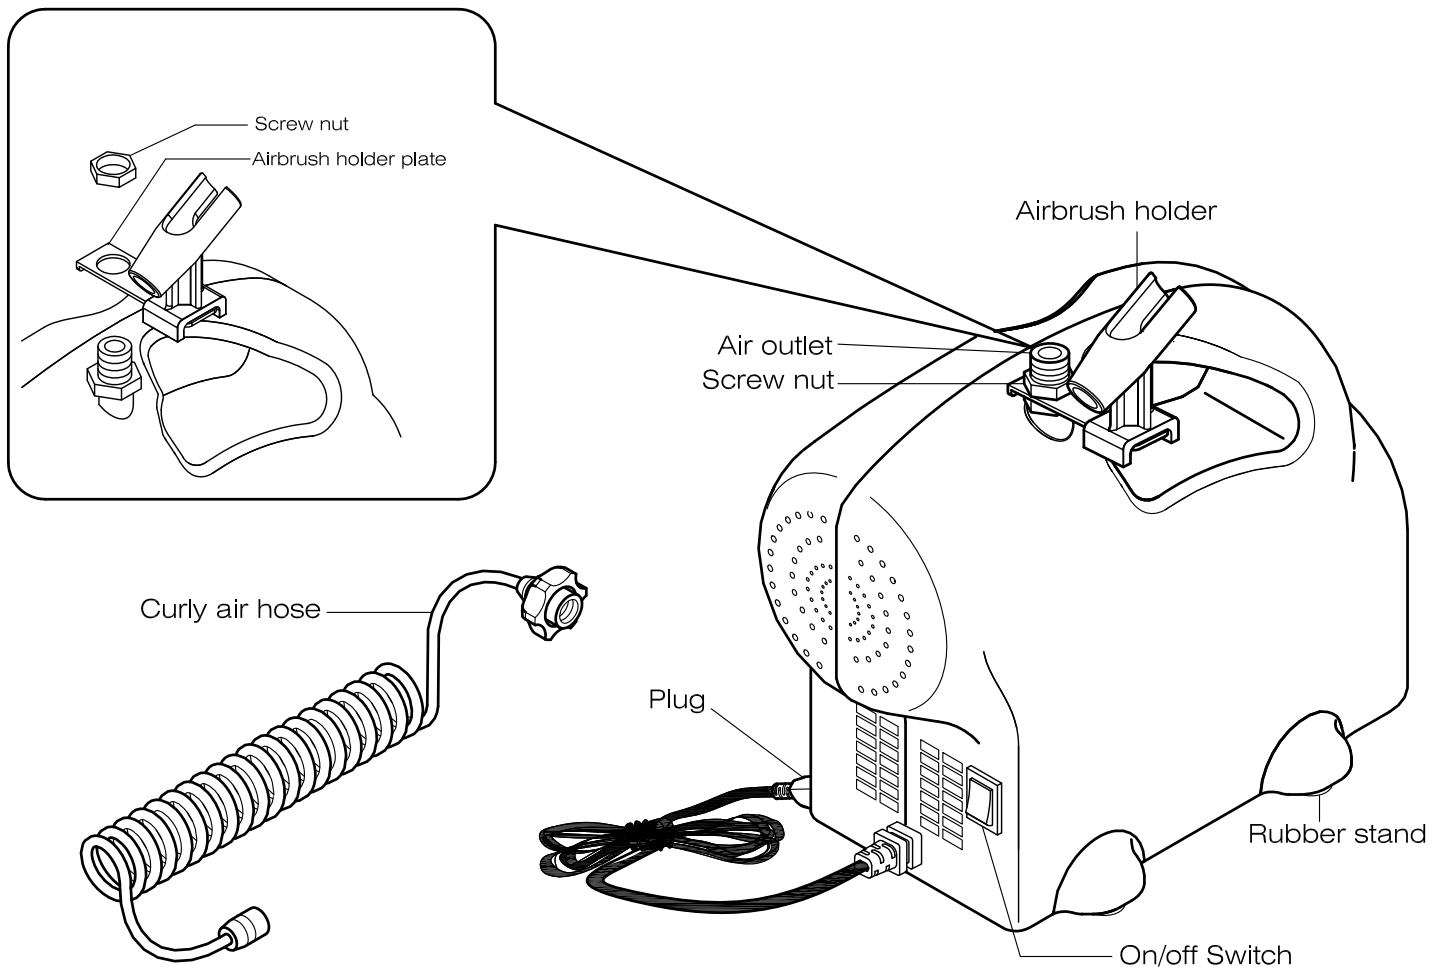

※Please check the Voltage/Spec. label on the machine

APPLICATION PRECAUTION

- 1) Carefully unpack the machine and check if any part is damaged during transportation. Any damage should be reported immediately to the service agent.
- 2) Plug the compressor into mains supply, making sure the voltage is correct. Screw the Airbrush holder plate onto the compressor outlet. Screw one side of the air hose onto the compressor outlet and connect the other end to the airbrush.
To make sure all connections are tightened, it is also recommended to use Plumbers Teflon Tape on all threaded connections.
(Extra fittings may be required for various airbrush brands, models, please check with the distributors for supply.)
- 3) Turn on the machine and work in a well ventilated, clean area and away from wet surfaces.
- 4) The compressor has a thermal switch that automatically shuts off itself when it becomes overheated or lacks voltage.
- 5) Do not touch the air compressor during or soon after use as it may become hot.
- 6) When restarting the compressor during operation, always release the compressed air from the airbrush first and then turn on again.
- 7) To maintain the best performance, it is suggested not to keep the machine running continuously over one hour and to allow machine to cool down.
- 8) After finishing with the compressor, turn the switch to off position and depress the airbrush trigger to fully release the remaining air from the compressor.
- 9) For safety purpose, use under 45 psi, do not exceed.
- 10) Improper operation and dismantling of the parts might damage the compressor. If any parts of the machine are damaged, it must be sent to the service agent for replacement or repair to avoid hazard. Do not attempt to fix the machine without consulting the service agent first.